


Auburn


Plug-in / Suspension hooks

Source hook rating: maximum 15 lb. Toggle hooks are for drywall only; screw hooks are for direct wood or ceiling-joint mounting only. Do not install in radiant-heating ceilings.


DRYWALL / TOGGLE HOOK

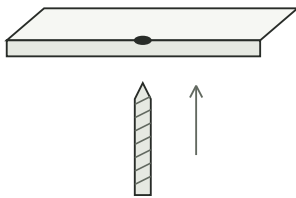

01 Drywall: drill a pilot hole.

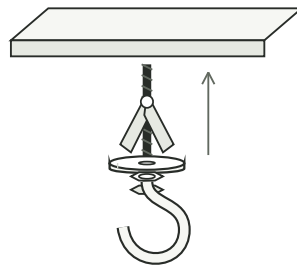


02 Fold the toggle wings and push them through the hole until they unfold on the other side of the drywall.

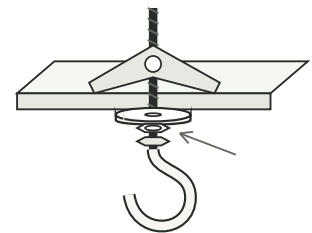


03 Tighten the nut until snug.


WOOD OR JOIST / SCREW HOOK

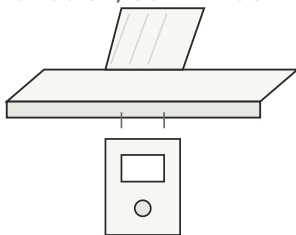

04 Wood or ceiling joist: identify the stud or joist using a stud finder.

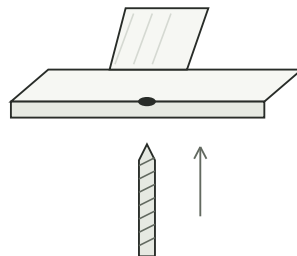

05 Drill a pilot hole.

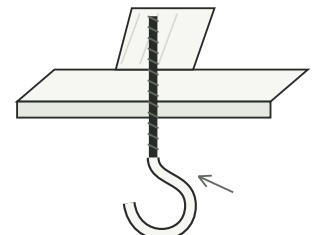


06 Twist the screw hook into the hole until snug.

For plaster, brick or concrete ceilings, the source directs consultation with a local hardware store. Consult a licensed electrician and turn off circuit power before any wiring. Verify the actual hooks and complete suspended weight; this is not a load approval for a custom fixture.

Auburn

Printed assembly, bulb and final check / Plug-in

Disconnect power before handling the socket or bulb. Support the printed pieces while fitting the retaining parts; do not support them by the bulb.

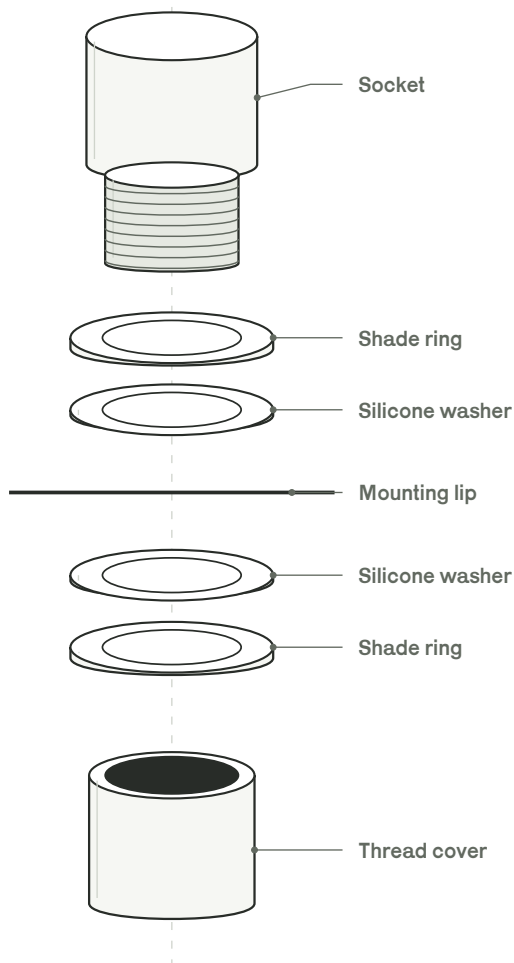

Retaining parts / exploded detail

The printed part is clamped at its internal mounting lip between the two washers and shade rings. The exposed-bulb spacer is not used in this shaded assembly.

01 Place the retaining parts

Place a shade ring and silicone washer on each side of the printed mounting lip. Pass the socket through the mounting opening.

02 Secure the printed assembly

Thread the socket cover onto the socket until snug. Do not overtighten. Check that the printed assembly is retained securely before releasing support.

03 Fit the supplied LED bulb

Use the supplied T30 / E26 / 12 W LED bulb. Hardware maximum: 60 W per bulb. Keep the bulb clear of the retaining hardware and printed pieces.

04 Check, then power on

Check mounting screws, cord retention where present and every printed assembly. Restore power only after assembly is secure. If anything is loose, damaged or does not fit, leave power off and contact Eldon Trace.

Care: disconnect power and allow bulbs to cool before cleaning or changing a bulb. Retain these instructions with your fixture.