

Drop Out

Wall mounting / Hardwired

Have a licensed electrician install this fixture. Turn off power at the breaker and verify the circuit is de-energized before work. Confirm supply voltage and mounting support.



Connection

Hardwired

Mounting

Junction box

Socket

E26

Brass hardware shown

01 Secure the mounting plate

Attach the supplied plate to a suitable junction box using its mounting screws. Support the completed fixture independently while making the electrical connections.

02 Make the connections

Connect fixture black to supply hot and fixture white to supply neutral with suitable connectors. Connect the supply ground to the canopy grounding screw as specified for this hardware.

03 Attach the canopy

Arrange conductors inside the junction box without pinching them. Align the canopy side holes with the mounting plate and fasten the supplied canopy screws.


04 Complete the assembly

Keep power off. Fit the printed assembly and supplied bulb as described on page 2. Maintain at least 1 in between printed surfaces and the wall.

Drop Out

Printed assembly, bulb and final check / Hardwired

Disconnect power before handling the socket or bulb. Support the printed pieces while fitting the retaining parts; do not support them by the bulb.

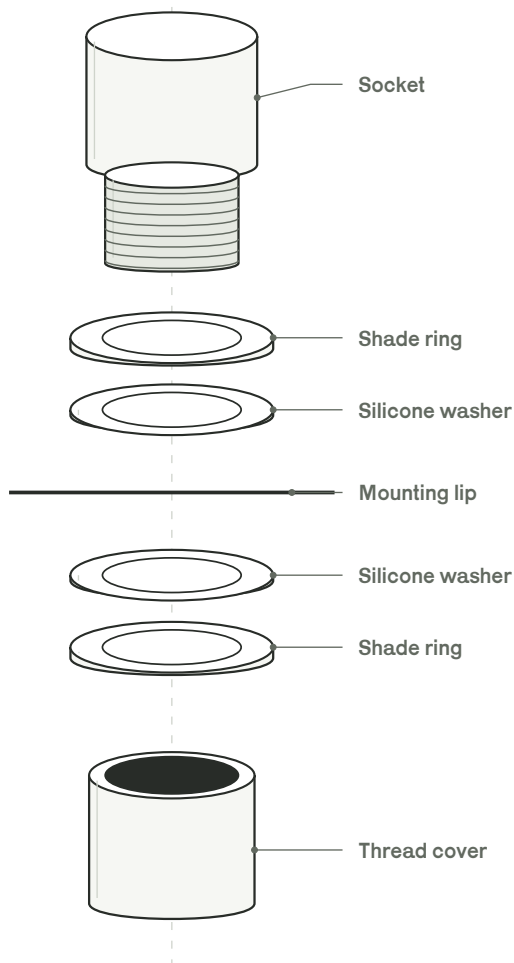

Retaining parts / exploded detail

The printed part is clamped at its internal mounting lip between the two washers and shade rings. The exposed-bulb spacer is not used in this shaded assembly.

01 Place the retaining parts

Place a shade ring and silicone washer on each side of the printed mounting lip. Pass the socket through the mounting opening.

02 Secure the printed assembly

Thread the socket cover onto the socket until snug. Do not overtighten. Check that the printed assembly is retained securely before releasing support.

03 Fit the supplied LED bulb

Use the supplied T30 / E26 / 12 W LED bulb. Hardware maximum: 60 W per bulb. Keep the bulb clear of the retaining hardware and printed pieces.

04 Check, then power on

Check mounting screws, cord retention where present and every printed assembly. Restore power only after assembly is secure. If anything is loose, damaged or does not fit, leave power off and contact Eldon Trace.

Care: disconnect power and allow bulbs to cool before cleaning or changing a bulb. Retain these instructions with your fixture.