

Drop Out

Wall mounting / Plug-in

Keep the fixture unplugged throughout installation. Have the wall and mounting hardware assessed for the completed fixture weight.



Connection

Plug-in

Supplied cord

8 ft / 2-prong plug

Switch position

18 in from canopy

Brass hardware shown

01 Position the mounting plate

Level the plate at the chosen position and mark its screw holes. Keep at least 1 in between the completed printed fixture and the wall.

02 Secure the plate

Use mounting fasteners suitable for the wall and fixture weight. Fit drywall anchors where needed; direct stud mounting does not require drywall anchors. Fasten the plate flush.

03 Attach the fixture

Support the fixture, align the canopy side holes with the mounting plate and secure it with the supplied canopy screws. Do not trap the cord.


04 Complete the assembly

Keep the plug disconnected. Fit the printed assembly and supplied bulb as described on page 2 before connecting power.

Drop Out

Printed assembly, bulb and final check / Plug-in

Disconnect power before handling the socket or bulb. Support the printed pieces while fitting the retaining parts; do not support them by the bulb.

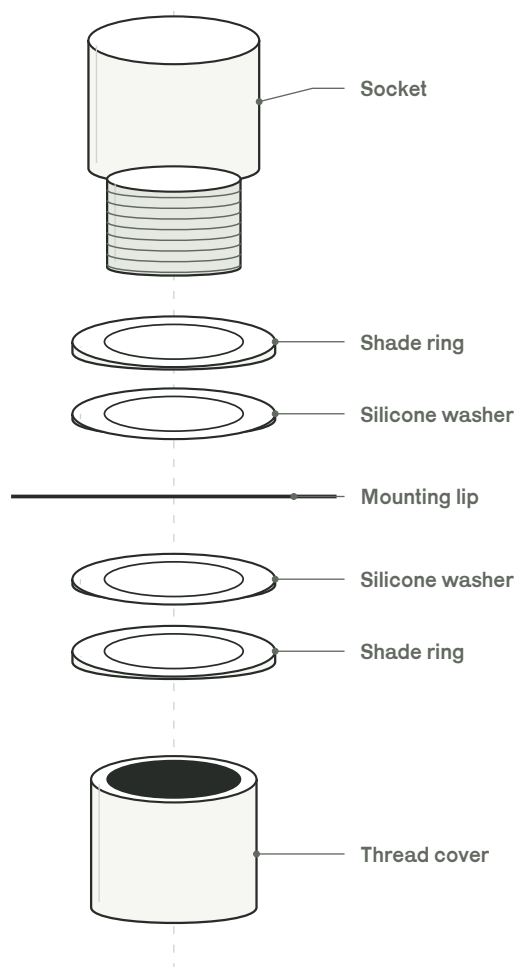

Retaining parts / exploded detail

The printed part is clamped at its internal mounting lip between the two washers and shade rings. The exposed-bulb spacer is not used in this shaded assembly.

01 Place the retaining parts

Place a shade ring and silicone washer on each side of the printed mounting lip. Pass the socket through the mounting opening.

02 Secure the printed assembly

Thread the socket cover onto the socket until snug. Do not overtighten. Check that the printed assembly is retained securely before releasing support.

03 Fit the supplied LED bulb

Use the supplied T30 / E26 / 12 W LED bulb. Hardware maximum: 60 W per bulb. Keep the bulb clear of the retaining hardware and printed pieces.

04 Check, then power on

Check mounting screws, cord retention where present and every printed assembly. Restore power only after assembly is secure. If anything is loose, damaged or does not fit, leave power off and contact Eldon Trace.

Care: disconnect power and allow bulbs to cool before cleaning or changing a bulb. Retain these instructions with your fixture.