



Eavesdropper

Hardwired / Stem cord grip


Disconnect power before assembly. Turn off power at the circuit before wiring and consult a licensed electrician.

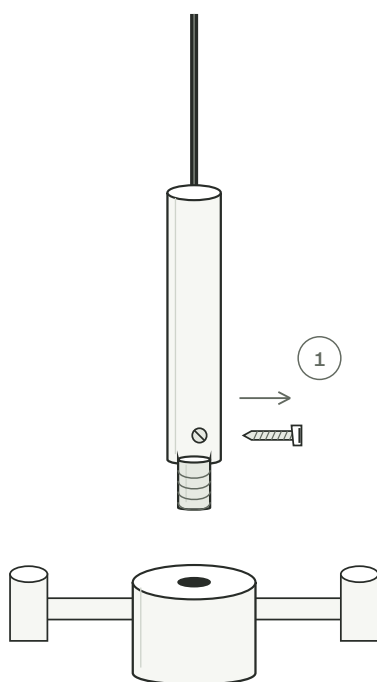

Release the grip

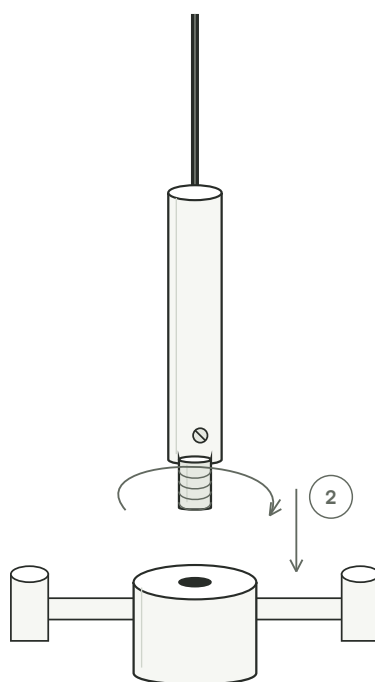

Thread into the cluster

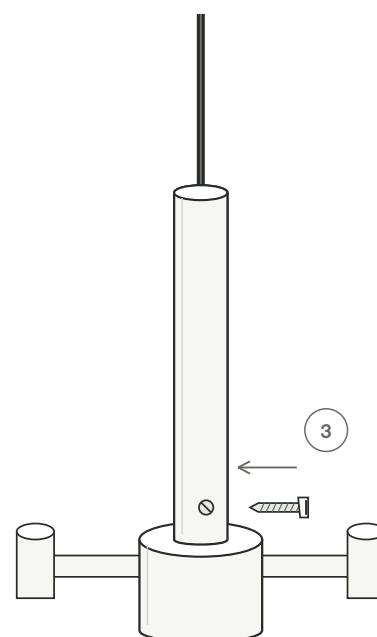

Secure the set screw

01 Using a screwdriver, loosen the set screw until the stem cord grip moves freely.

02 Insert the stem cord grip into the cluster body and turn clockwise to tighten.


03 Tighten the set screw.

Use mounting hardware suitable for the surface and completed fixture weight. Continue to the final page for the printed assembly and supplied bulb. Keep power disconnected until assembly is secure.

Eavesdropper

Hardwired / Ceiling canopy

Turn off power at the circuit before wiring. Always consult a licensed electrician.

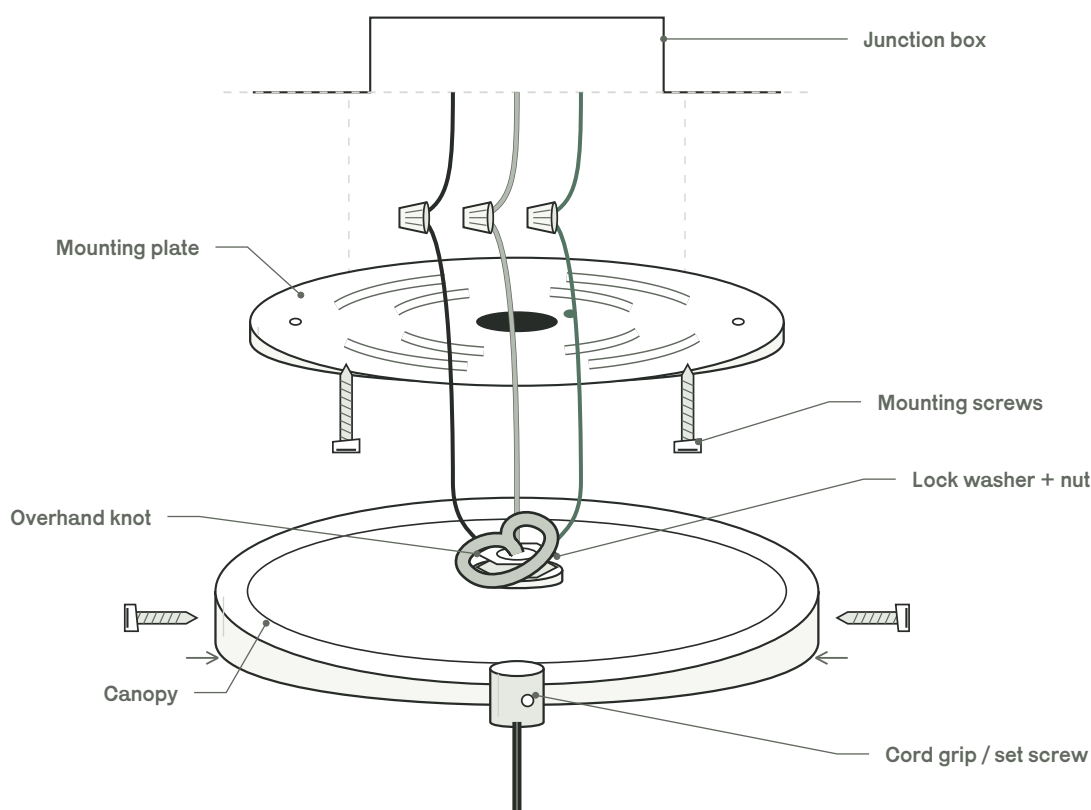

EXPLODED ASSEMBLY / mounting plate, canopy and cord retention

- 01 Turn off power to the circuit.
- 02 Attach the cord grip to the canopy. Secure it with the lock washer and nut on the inside.
- 03 Tie an overhand knot inside the canopy.


Continue on page 03 for conductor connections and final fastening. No strip length, torque or fastener specification is supplied by this source. Confirm those details with the actual hardware and electrician. The illustration is exploded and not to scale.

Eavesdropper


Hardwired / Ceiling connections

Turn off power at the circuit before wiring. Always consult a licensed electrician.

01 / CONDUCTOR CONNECTIONS

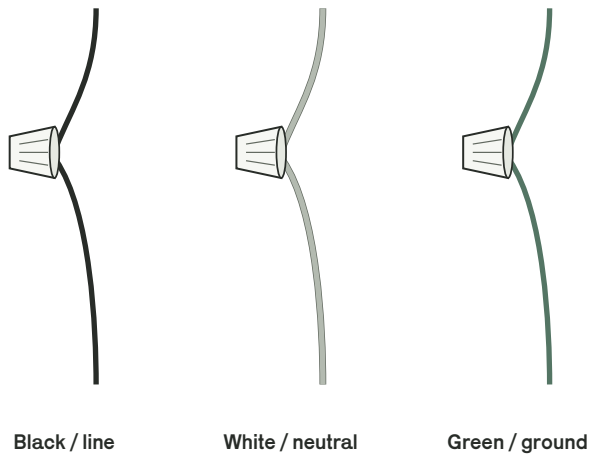

02 / CORD-GRIP DETAIL

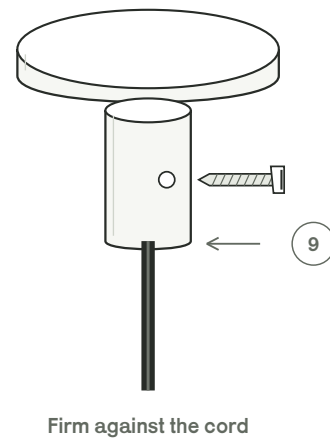


- 04 Locate the black, white and green or bare-copper ground wires in the junction box and at the end of the fabric-covered wire.
- 05 Strip the wire ends to expose the stranded copper wire.
- 06 Connect matching wires using wire connectors and secure the connections with electrical tape, as specified in the source guide.
- 07 Secure the mounting plate to the ceiling.
- 08 Secure the canopy to the mounting plate.
- 09 Tighten the plastic set screw in the canopy cord grip firmly against the cord.

No strip length, torque or fastener specification is supplied by this source. Confirm those details with the actual hardware and electrician. The illustration is exploded and not to scale.

Eavesdropper

Printed assembly, bulb and final check / Hardwired

Disconnect power before handling the socket or bulb. Support the printed pieces while fitting the retaining parts; do not support them by the bulb.

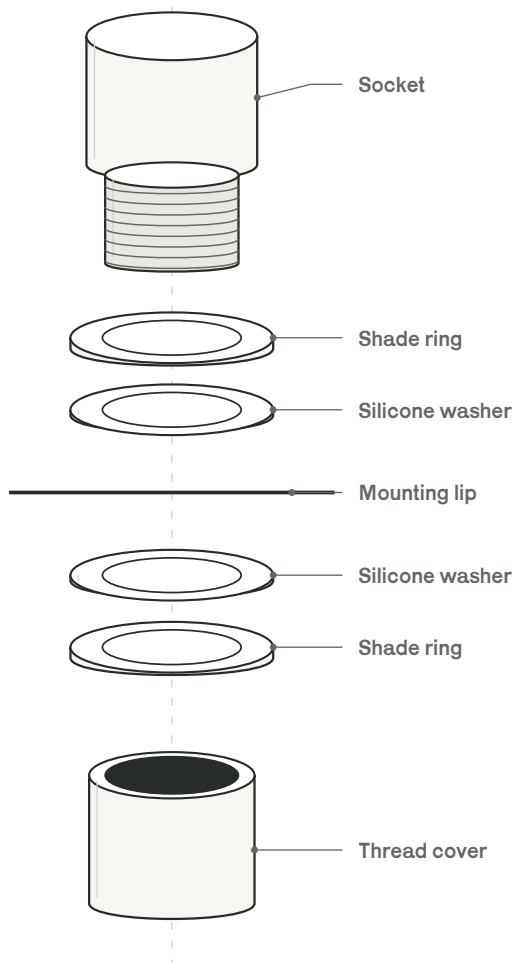

Retaining parts / exploded detail

The printed part is clamped at its internal mounting lip between the two washers and shade rings. The exposed-bulb spacer is not used in this shaded assembly.

01 Place the retaining parts

Place a shade ring and silicone washer on each side of the printed mounting lip. Pass the socket through the mounting opening.

02 Secure the printed assembly

Thread the socket cover onto the socket until snug. Do not overtighten. Check that the printed assembly is retained securely before releasing support.

03 Fit the supplied LED bulb

Use the supplied T30 / E26 / 12 W LED bulb. Hardware maximum: 60 W per bulb. Keep the bulb clear of the retaining hardware and printed pieces.

04 Check, then power on

Check mounting screws, cord retention where present and every printed assembly. Restore power only after assembly is secure. If anything is loose, damaged or does not fit, leave power off and contact Eldon Trace.

Care: disconnect power and allow bulbs to cool before cleaning or changing a bulb. Retain these instructions with your fixture.